

Figure 1: Block diagram of the Cortex-M33 processor

Overview

The Arm Cortex-M33 processor is the first Armv8-M processor designed to address embedded and IoT markets especially those that require efficient security or digital signal control. Armv8-M introduces TrustZone which forms the foundation of security for embedded and IoT applications. The processor has specific features to increase processing at the endpoint such as a 20% increase in performance over the Cortex-M4, a Digital Signal Processing (DSP) extension, a Floating-point Unit (FPU), a coprocessor interface to offload compute intensive operations, and Arm Custom Instructions (ACI) to speed up specific operations.

Features

| Feature | Description |
|---------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|
| Pipeline | 3-stage |
| Software security | Optional TrustZone for Armv8-M, with optional security attribution unit (SAU) of up to 8 regions Stack limit checking |
| DSP extension | Optional DSP/SIMD instructions Single-cycle 16/32-bit MAC Single-cycle dual 16-bit MAC 8/16-bit SIMD arithmetic |
| FPU | Optional single-precision FPU IEEE 754 compliant |
| Coprocessor interface | Optional dedicated coprocessor bus interface for up to 8 coprocessor units for custom compute |
| Arm Custom Instructions | Custom data path to add custom instructions |
| Memory protection | Optional Memory Protection Unit (MPU) with up to 16 regions per security state |
| Interrupts | Non-maskable Interrupt (NMI) and up to 480 physical interrupts with 8 to 256 priority levels |
| Wake-up Interrupt Controller (WIC) | Optional for waking up the processor from state retention power gating or when all clocks are stopped |
| Sleep modes | Integrated wait for event (WFE) and wait for interrupt (WFI) instructions with Sleep On Exit functionality |
| Debug | Optional JTAG and Serial Wire Debug ports Up to 8 Breakpoints and 4 Watchpoints |
| Trace | Optional Embedded Trace Macrocell (ETM), Micro Trace Buffer (MTB), Data Watchpoint and Trace (DWT) and Instrumentation Trace Macrocell (ITM) |

About the Processor

The Cortex-M33 processor has a low gate count, it is very energy-efficient and is intended for microcontroller and deeply embedded applications. The processor is based on the Armv8-M architecture and is suited for applications where security is an important consideration.

The interfaces that the processor supports include:

- ♣ Code AHB (C-AHB) interface
- ♣ System AHB (S-AHB) interface
- * External PPB (EPPB) APB interface
- ♣ Debug AHB (D-AHB) interface

The processor has optional:

- Arm TrustZone technology, using the Armv8-M security extension supporting Secure and Non-secure states
- ♣ MPUs which you can configure to protect regions of memory
- + Floating-point arithmetic functionality with support for single-precision arithmetic
- ♣ Support for ETM and MTB trace
- Arm Custom Instructions

The processor is highly configurable and is intended for a wide range of high-performance, deeply embedded applications that require fast interrupt response features.

Block Diagram

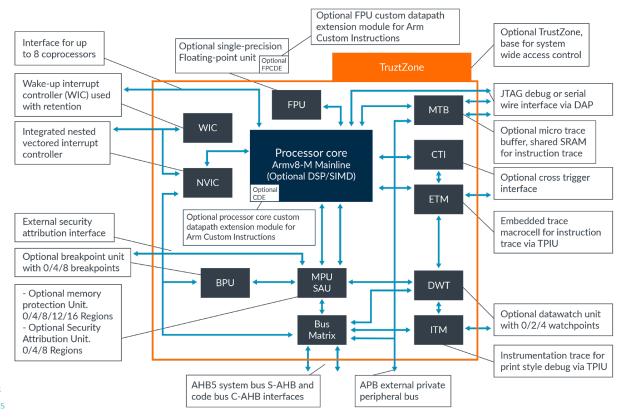


Figure 2: Cortex-M33 processor components

Cortex-M33 Components

Processor Core

The processor core provides:

- ♣ Limited dual-issue of common 16-bit instruction pairs
- ★ Single cycle 32×32-bit multiplier
- ★ Integer divide unit with support for operand-dependent early termination
- * Support for interrupted continuable load and store multiple operations
- ♣ Load and store operations that both support precise bus errors
- To support Arm Custom Instruction, the processor core includes an optional CDE module. This module is used to execute user-defined instructions that work on general-purpose registers

Security Attribution and Memory Protection

The Cortex-M33 processor supports the Armv8-M Protected Memory System Architecture (PMSA) that provides programmable support for memory protection using a number of software controllable regions.

Memory regions can be programmed to generate faults when accessed inappropriately by unprivileged software reducing the scope of incorrectly written application code. The architecture includes fault status registers to allow an exception handler to determine the source of the fault and to apply corrective action or notify the system.

The Cortex-M33 processor also includes optional support for defining memory regions as Secure or Non- secure, as defined in the Armv8-M security extension, and protecting the regions from accesses with an inappropriate level of security.

Floating-point Unit

The FPU provides:

- Instructions for single-precision (C programming language float type)
 data-processing operations
- Instructions for double-precision (C double type) load and store operations
- Combined multiply-add instructions for increased precision (Fused MAC)
- ♣ Hardware support for conversion, addition, subtraction, multiplication with optional accumulate, division, and square-root
- Hardware support for denormals and all IEEE Standard 754-2008 rounding modes
- ♣ 32 32-bit single-precision registers or 16 64-bit double-precision registers
- ♣ Lazy floating-point context save. Automated stacking of floating-point state is delayed until the ISR attempts to execute a floating-point instruction. This reduces the latency to enter the ISR and removes floating-point context save for ISRs that do not use floating-point

♣ To support Arm Custom Instructions, the FPU includes an optional floating-point CDE module. This module is used to execute user-defined instructions that work on floating-point registers. If the optional FPU is not present, then the optional floating-point CDE module is not present either

Nested Vectored Interrupt Controller

The Nested Vectored Interrupt Controller (NVIC) is closely integrated with the core to achieve low-latency interrupt processing.

Functions of the NVIC include:

- ★ External interrupts, configurable from 1 to 480 using a contiguous or non-contiguous mapping. This is configured at implementation
- ★ Configurable levels of interrupt priority from 8 to 256. This is configured at implementation. Dynamic reprioritization of interrupts
- Priority grouping. This enables selection of preempting interrupt levels and non-preempting interrupt levels
- Support for tail-chaining and late arrival of interrupts. This enables back-to-back interrupt
 processing without the overhead of state saving and restoration between interrupts
- Optional support for the Armv8-M security extension. Secure interrupts can be prioritized above any Non-secure interrupt

Coprocessor Interface

The Cortex-M33 processor supports an external coprocessor interface which allows the integration of tightly coupled accelerator hardware with the processor. The programmers model allows software to communicate with the hardware using architectural coprocessor instructions.

The external coprocessor interface:

- Supports up to eight separate coprocessors, CPO-CP7, depending on your implementation. The remaining coprocessor numbers, C8-C15, are reserved. CP10 and CP11 are always reserved for hardware floating-point. For more information, see the Armv8-M Architecture Reference Manual
- Supports low-latency data transfer from the processor to and from the accelerator components
- ★ Has a sustained bandwidth up to twice of the processor memory interface

Cross Trigger Interface Unit

The optional CTI enables the debug logic, micro trace buffer (MTB), and ETM to interact with each other and with other CoreSight components.

ETM

The optional Embedded Trace Macrocell provides instruction-only capabilities when configured. See the Arm CoreSight ETM-M33 Technical Reference Manual for more information.

Micro Trace Buffer

The MTB provides a simple low-cost execution trace solution for the Cortex-M33 processor.

Trace is written to an SRAM interface, and can be extracted using a dedicated AHB slave interface (M- AHB) on the processor. The MTB can be controlled by memory mapped registers in the PPB region or by events generated by the DWT or through the CTI. See the Arm CoreSight MTB-M33 Technical Reference Manual for more information.

Debug and Trace

Debug and trace components include a configurable Breakpoint Unit (BPU) for implementing breakpoints, and a configurable DWT unit for implementing watchpoints, data tracing, and system profiling.

Other debug and trace components include optional ITM for support of printf() style debugging, using instrumentation trace. Interfaces are suitable for:

- Passing on-chip data through a Trace Port Interface Unit (TPIU) to a Trace Port Analyzer (TPA), including Serial Wire Output (SWO) mode
- ♣ A ROM table to allow debuggers to determine which components are implemented in the Cortex-M33 processor
- Debugger access to all memory and registers in the system, including access to memory-mapped devices, access to internal core registers when the core is halted, and access to debug control registers even when reset is asserted

Interfaces

The processor has various external interfaces.

- **Code and System AHB Interfaces -** Harvard AHB bus architecture supporting exclusive transactions and security state.
- → System AHB Interface The S-AHB interface is used for any instruction fetch and data access to the memory-mapped SRAM, peripheral, external RAM and external device, or vendor_SYS regions of the Armv8-M memory map.
- ★ Code AHB Interface The C-AHB interface is used for any instruction fetch and data access to the code region of the Armv8-M memory map.
- **External Private Peripheral Bus -** The EPPB APB interface enables access to CoreSight-compatible debug and trace components in a system connected to the processor.
- → Secure Attribution Interface The processor has an interface that connects to an
 external Implementation Defined Attribution Unit (IDAU), which enables your system
 to set security attributes based on address.

- ATB Interfaces The ATB interfaces output trace data for debugging. The ATB interfaces are compatible with the CoreSight architecture. See the Arm CoreSight Architecture Specification v2.0 for more information. The instruction ATB interface is used by the optional ETM, and the instrumentation ATB interface is used by the optional ITM.
- Micro Trace Buffer Interfaces The MTB AHB slave interface and SRAM interface are for the optional CoreSight Micro Trace Buffer.
- Coprocessor Interface The coprocessor interface is designed for closely coupled external accelerator hardware.
- Debug AHB Interface The D-AHB slave interface allows a debugger access to registers, memory, and peripherals. The D-AHB interface provides debug access to the processor and the complete memory map.
- Cross Trigger Interface The processor includes an optional CTI Unit that has an interface that is suitable for connection to external CoreSight components using a Cross Trigger Matrix (CTM).
- Power Control Interface The processor optionally supports a number of internal power domains which can be enabled and disabled using Q-channel interfaces connected to a Power Management Unit (PMU) in the system.

Arm Custom instructions

Arm introduces two sets of three classes of <u>instruction extension</u> in the coprocessor instruction space:

- ★ Three classes operate on the general-purpose register file, including the condition code flags NZCV
- ♣ Three classes operate on the floating-point/SIMD register file only

The three classes are defined by the following instruction patterns:

- The destination register or the destination register pair of an instruction might be read, as well as written (non-accumulator and accumulator variants)
- ♣ The operation code can be split between a true operation code in the custom datapath and an immediate value used in the custom datapath
- ♣ Immediate consequences of the above are:
 - No operations on the floating-point registers can set condition codes
 - There are no operations using registers from both register files
- Operations on the general-purpose register file operate on 32-bit registers, or a dual-register consisting of a 64-bit value constructed from an even-numbered, general-purpose register and its immediately following odd pair

| Instruction | Assembly | Inputs | Outputs | | |
|------------------------------------------|----------------------------------|----------------------------------------------------------------------|----------------------------|--|--|
| General-purpose registers and NZCV flags | | | | | |
| CX1{A} | CX1{A} Pn,{Rd,}Rd,#imm | Immediate and 1x 32-bit GPR/NZCV {same as output} | 1x 32-bit GPR or NZCV | | |
| CX2{A} | CX2{A} Pn,{Rd,}Rd,Rn,#imm | Immediate and 2x 32-bit GPR/NZCV (one same as output) | 1x 32-bit GPR or NZCV | | |
| CX3{A} | CX3{A} Pn, {Rd, }Rd,Rn,Rm,#imm | Immediate and 3x 32-bit GPR/NZCV (one same as output) | 1x 32-bit GPR or NZCV | | |
| CX1D{A} | CX1D{A} Pn, {Rd, }Rd, #imm | Immediate and 1x 32-bit GPR/NZCV (two same as output) | 2x 32-bit GPR | | |
| CX2D{A} | CX2D{A} Pn, {Rd, }Rd,Rn,#imm | Immediate and 2x 32-bit GPR/NZCV (two same as output) | 2x 32-bit GPR | | |
| CX3D{A} | CX3D{A} Pn, {Rd, }Rd,Rn,Rm,#imm | Immediate and 3x 32-bit GPR/NZCV (two same as output) | 2x 32-bit GPR | | |
| Vector registers | | | | | |
| VCX1{A}.F | VCX1{A}.F Pn, {Sd,}Sd,#imm | Immediate and 1x 32-bit fp32 register {same as output} | 1x 32-bit fp32 register | | |
| VCX2{A}.F | VCX2{A}.F Pn, {Sd,}Sd,Sd,#imm | Immediate and 2x 32-bit fp32 register {one same as output} | 1x 32-bit fp32 register | | |
| VCX3{A}.F | VCX3{A}.F Pn, {Sd,}Sd,Sn,Sm,#imm | Immediate and 3x 32-bit fp32 register {one same as output} | 1x 32-bit fp32 register | | |
| VCX1{A}.D | VCX1{A}.D Pn, {Dd,}Dd,#imm | Immediate and 1x 64-bit fp64 register {same as output} | 1x 64-bit fp64 register | | |
| VCX2{A}.D | VCX2{A}.D Pn,{Dd,}Dd,Dn,#imm | Immediate and 2x 64-bit fp64 register {one same as output} | 1x 64-bit fp64 register | | |
| VCX3{A}.D | VCX3{A}.D Pn, {Dd,}Dd,Dn,Dm,#imm | Immediate and 3x 64-bit fp64 register {one same as output} | 1x 64-bit fp64 register | | |
| VCX1{A}.Q | VCX1{A}.Q Pn,{Qd,}Qd,#imm | Immediate and 1x 128-bit vector register {same as output} | 1x 128-bit vector register | | |
| VCX2{A}.Q | VCX2{A}.Q Pn,{Qd,}Qd,Qn,#imm | Immediate and 2x 128-bit vector register {one same as output} | 1x 128-bit vector register | | |
| VCX3{A}.Q | VCX3{A}.Q Pn,{Qd,}Qd,Qn,Qm,#imm | Immediate and 3x 128-bit vector register {one same as output} | 1x 128-bit vector register | | |

| Pn | Coprocessor number | Sd | Destination register (32-bit vector register) |
|--------|----------------------------------------------------|--------|-----------------------------------------------|
| А | Accumulate Sn, Sm Input registers (32-bit vector r | | Input registers (32-bit vector registers) |
| Rd | Destination register | Dd | Destination register (64-bit vector register) |
| Rn, Rm | Input registers | Dn, Dm | Input registers (64-bit vector registers) |
| {} | Optional | Qd | Destination register (128-bit vector) |
| #imm | Immediate value | Qn, Qm | Input registers (128-bit vector registers) |

Cortex-M33 Pipeline

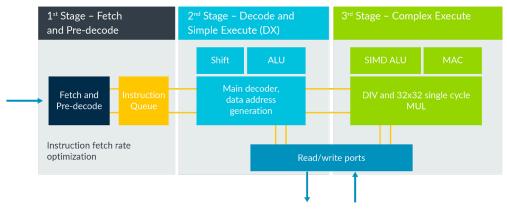


Figure 3: Cortex-M33 processor pipeline

- → 3-stage pipeline
- → Early termination of operation completing in DX
- + Limited dual issue capability
- ♣ Five x 16-bit instruction queue
- ♣ Full Harvard memory interface


Corstone Reference Design

<u>Corstone</u> provides an ideal starting point for any SoC design, with the lowest risk and development cost. It includes various system IP components and a reference design integrating the processor, security and system IP, as well as a range of software and development tools.

Corstone features include:

- + Implementation of an Arm-defined subsystem architecture
- Integration of the main components
- Extensively verified
- ♣ Broad software roadmap
- → Build your SoC on top of it
- ♣ Configurable and modifiable
- ♣ Tailor it to specific needs
- ♣ Accelerates PSA Certified
- ♣ Silicon-proven

arm CORSTONE

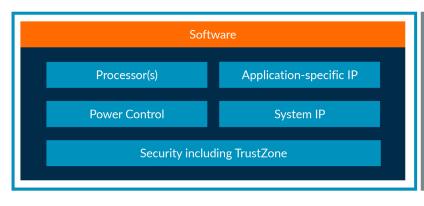

Tools, Physical IP, Models, FPGA and Test Chips

Figure 4: Corstone reference design diagram

Processor Configuration Options

The Cortex-M33 processor has configurable options that you can set during the implementation and integration stages to match your functional requirements.

| Feature | Options | | |
|------------------------------------------------|------------------------------------------------------------------------------------------------------|--|--|
| | No floating-point | | |
| Floating-point | Single-precision floating-point only | | |
| | No Armv8-M DSP Extension | | |
| DSP extension | Armv8-M DSP extension supported, including the following instruction classes | | |
| TrustZone | No TrustZone for Armv8-M | | |
| Trustzone | TrustZone for Armv8-M security extension | | |
| Non-secure protected memory regions | 0 region, 4 regions, 8 regions, 12 regions, or 16 regions | | |
| Secure protected memory regions | O region, 4 regions, 8 regions, 12 regions, or 16 regions when TrustZone is included | | |
| Security Attribution Unit (SAU) | O region, 4 regions, or 8 regions when TrustZone is included | | |
| | 1-480 interrupts | | |
| Interrupts | To support non-contiguous mapping, you can remove individual interrupts | | |
| Number of bits of interrupt priority | Between three and eight bits of interrupt priority, between 8 and 256 levels of priority implemented | | |
| | Minimal debug | | |
| | No Halting debug or memory and peripheral access | | |
| | Reduced set | | |
| Debug watchpoints and breakpoints | Two data watchpoint comparators and four breakpoint comparators | | |
| | Full set | | |
| | Four data watchpoint comparators and eight breakpoint comparators | | |
| ITM and DWT | No ITM or DWT trace | | |
| functionality | Complete ITM and DWT trace | | |
| ETA 4 | No ETM support | | |
| ETM | ETM instruction execution trace | | |
| MTD | No MTB support | | |
| MTB | MTB instruction trace | | |
| CTI | No CTI | | |
| CII | CTI included | | |
| WIC | No WIC controller | | |
| VVIC | WIC controller included | | |
| External coprocessor | No support for coprocessor hardware | | |
| interface | Support for coprocessor hardware | | |
| Arm Custom Instructions with Custom Datapath | The coprocessor executes instructions and the CDE modules are not used | | |
| Extension (CDE) modules on a coprocessor basis | The CDE module executes instructions and the coprocessor is bypassed | | |

Instruction Set

New Armv8-M instructions

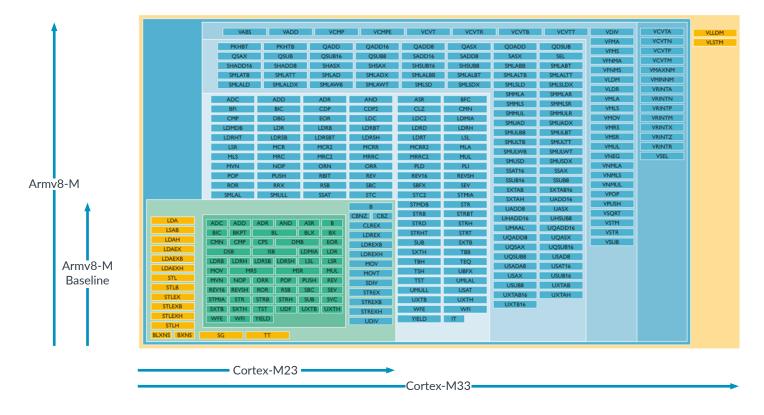


Figure 5: Instruction set

Power, Performance and Area

| DMIPS | CoreMark/MHz |
|-------|--------------|
| 1.50 | 4.02 |

| Configuration | 40ULP | | 40LP | | 28HT | | 16FFC | |
|----------------------------------|----------------------|--------|--------------------|--------|----------------------|--------|-----------------------|--------|
| | Arm SC9 ELVT C40 SSG | | Arm SC9 RVT C50 SS | | Arm SC7MC PP140Z SVT | | Arm SC7P5MC PP96P SVT | |
| | 0.99V, -40°C | | 0.99V, -40°C | | HD C40 SSG 0.81V 0°C | | C16 SSGNP 0.72V 0°C | |
| | Area | Power | Area | Power | Area | Power | Area | Power |
| | mm² | μW/MHz | mm² | μW/MHz | mm² | μW/MHz | mm ² | μW/MHz |
| Minimum Configuration* | 0.026 | 12.6 | 0.028 | 12.0 | 0.011 | 5.6 | 0.008 | 3.9 |
| Feature Rich with TrustZone** | 0.093 | 17.1 | 0.097 | 17.4 | 0.039 | 7.9 | 0.026 | 5.4 |

| Max Freq | 40LP Arm 40LP SC12 RVT C50 SS 0.99V, -40°C | | 16FFC Arm SC7P5MC PP96P SVT C16 SSGNP 0.72V 0°C |
|---------------------------------------------|--------------------------------------------------|---------------------------|-------------------------------------------------------|
| Feature Rich Configuration with TrustZone** | 235 MHz (register to I/O) | 614 MHz (register to I/O) | 1028 MHz (register to I/O) |

*FPU 0; DSP 0; SECEXT 0; CPIF 0; MPU_NS 0; MPU_S 0; SAU 0; NUMIRQ 1; IRQLVL 3; IRQLATENCY 4294967295; IRQDIS 0; DBGLVL 0; ITM 0; ETM 0; MTB 0; MTBAWIDTH 0; WIC 0; WICLINES 0; CTI 0; RAR 0;

**FPU 1; DSP 1; SECEXT 1; CPIF 0; MPU_NS 8; MPU_S 0; SAU 0; NUMIRQ 32; IRQLVL 3; IRQLATENCY 4294967295; IRQDIS 0; DBGLVL 2; ITM 1; ETM 1; MTB 0; MTBAWIDTH 0; WIC 1; WICLINES 35; CTI 0; RAR 0;

Additional Technical documents

- 1. Cortex-M33 Technical Reference Manual TRM
- 2. Cortex-M33 Integration and Implementation Manual available as part of the Bill of Materials
- **3.** Armv8-M Architecture Reference Manual Arm
- 4. CoreSight ETM-M33 Technical Reference Manual ETM
- **5.** CoreSight MTB-M33 Technical Reference Manual MTB

Glossary of Terms

| ACI | Arm Custom Instructions |
|-------|---------------------------------------------------|
| AHB | Advanced High-performance Bus |
| APB | Advanced Peripheral Bus |
| ATB | Advanced Trace Bus |
| BPU | Breakpoint Unit |
| C-AHB | Code AHB |
| CDE | Custom Datapath Extension |
| CTI | Cross Trigger Interface |
| СТМ | Cross Trigger Matrix |
| D-AHB | Debug AHB |
| DSP | Digital Signal Processing |
| DWT | Data Watchpoint and Trace |
| EPPB | External Private Peripheral Bus |
| ETM | Instruction TraceEmbedded Trace Macrocell |
| FPU | Floating-point Unit |
| IDAU | Implementation Defined Attribution Unit |
| IEEE | Institute of Electrical and Electronics Engineers |
| ISR | Interrupt Service Routine |
| ITM | Instrumentation Trace Macrocell |
| JTAG | Joint Test Action Group |
| MAC | Multiply and Accumulate |
| MPU | Memory Protection Unit |
| MTB | Micro Trace Buffer |
| NMI | Non-maskable Interrupt |
| NVIC | Nested Vectored Interrupt Controller |
| PMSA | Protected Memory System Architecture |
| PMU | Power Management Unit |
| PPB | Private Peripheral Bus |
| PSA | Platform Security Architecture |
| RAM | Rand Access Memory |
| ROM | Read Only Memory |
| S-AHB | System AHB |

| SAU | Security Attribution Unit | |
|------|-----------------------------------|--|
| SIMD | Single Instruction, Multiple Data | |
| SRAM | Static RAM | |
| SWO | Serial Wire Output | |
| TPA | Trace Port Analyzer | |
| TPIU | Trace Port Interface Unit | |
| WFE | Wait for Event | |
| WFI | Wait for Interrupt | |
| WIC | Wake-up Interrupt Controller | |

Contact details

| UK | Europe | Japan | Taiwan | China |
|----------------------|----------------------|----------------------|----------------------|----------------------|
| Salesinfo-eu@Arm.com | Salesinfo-eu@Arm.com | Salesinfo-eu@Arm.com | Salesinfo-eu@Arm.com | Salesinfo-eu@Arm.com |
| | | | | |
| USA | Asia Pacific | Korea | Israel | India |
| Salesinfo-us@Arm.com | Salesinfo-us@Arm.com | Salesinfo-us@Arm.com | Salesinfo-us@Arm.com | Salesinfo-us@Arm.com |



All brand names or product names are the property of their respective holders. Neither the whole nor any part of the information contained in, or the product described in, this document may be adapted or reproduced in any material form except with the prior written permission of the copyright holder. The product described in this document is subject to continuous developments and improvements. All particulars of the product and its use contained in this document are given in good faith. All warranties implied or expressed, including but not limited to implied warranties of satisfactory quality or fitness for purpose are excluded. This document is intended only to provide information to the reader about the product. To the extent permitted by local laws Arm shall not be liable for any loss or damage arising from the use of any information in this document or any error or omission in such information.

© Arm Ltd. 2020